

How to code a new remote:



1. Remove two screws on faceplate to remove front panel.
2. Remove 2 screws on internal mounting plate to remove remote control receiver.




3. Push transceiver box out of mounting plate.



4. Use a flat blade screwdriver to open receiver box.
5. Supply power to remote setup.



6. Press red button inside receiver box while pressing button on remote transceiver fob red light will flash.

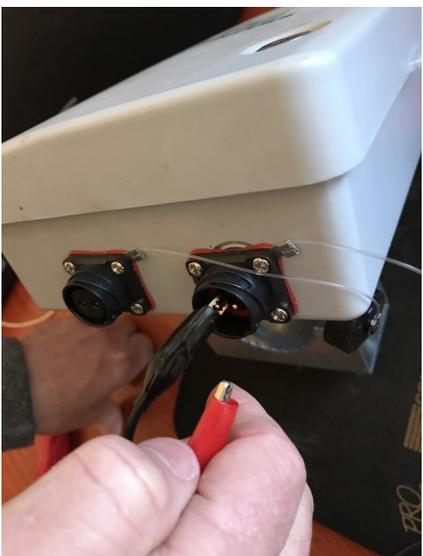

7. Transmitter is now coded to the receiver, replace components in reverse order.

