

## Replacing receiver and 12 volt relay.

See instructions on 'Remote Control Coding' on how to access receiver .



If remote unit is not working:  
Take out 6 coloured receiver wires, replace unit and re-wire as before or as per this picture.



If clutch drops in and out while energised the 12 volt relay may need replacing.